



**GTECH GTSIMF01
Desktop Wireless Phone**

capetune.com



USER GUIDE

IMPORTANT NOTICE

The GTECH Fixed/GSM small business system is not a mobile phone. As such please note the following in relation to the operation of the equipment.

1. This product has been designed to receive incoming calls on the fixed line network and make outgoing calls on a GSM network. Whilst the device can receive incoming calls on the mobile number certain functions such as SMS Alphanumeric address, Call Waiting / Hold, Call Barring, and Multi-party call is not available.
2. In accordance with Australian and International regulatory standards, the user should operate the device whilst remaining a distance of 25 cm from the main phone unit.

Table of Contents

General Information	1-2
Getting Started	3-12
Using the Phone	13-31



General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION, READ THIS INFORMATION BEFORE USING YOUR PHONE.

Safety

Exposure to Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

RF Energy Interference/Compatibility

Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some instances your phone may cause interference.

Medical Devices

- Radio signals transmitted from the unit may cause interference to hearing aids.
- It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.

Other

- Radio signals transmitted from the unit may cause interference to electrical equipment, such as TV's, Microwave, Computers etc. It is recommended that the unit be placed at least one meter away from such appliances.

Cleaning

- Make sure the unit is off and the charger is not plugged in before cleaning the unit.
- Use a damp cloth or anti-static wipe to clean. Never use household polish as this may damage the product.

General Information

Environmental

- Only use the power supply suitable for the GTECH range. Using an unauthorized power supply will invalidate your warranty and may damage the telephone.
- Do not expose unit to direct sunlight.
- Do not expose the unit to fire, explosive or other hazardous conditions.

Declaration of Conformity

We declare under our sole responsibility that the product detailed in this manual, and in combination with our accessories, conform to the essential requirements of the European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2., the Radio Communications Standard (Electro-magnetic Radiation Human Exposure) 2003, and the Australian Communications and Media Authority Section 376 of the Telecommunications Act 1997.

Technical Information

Dimensions (W x D x H)	200mm x 175mm x 65mm
Weight	Less than 1.5kg
Mounting Mode	Desktop or Wall Mounted
Input Voltage	AC: 220V , 50Hz DC:5V I000mA Standby Time: 24Hrs Talk Time: 3Hrs
Battery	Type: Li-ion Voltage:5V Capacity :1000mAh
Ambient Temperature	- 10°C - 40°C
Storage Temperature	-20°C - 70°C
Relative Humidity	10% - 95%
Working Frequency	GSM 850/900/1800/1900 Mhz

Getting Started

 
 
Introduction to your GTSIMF01 (Fixed and Mobile Small Business System)

Welcome

Congratulations on your new purchase. Before you start using your GTSIMF01, make sure the On/Off switch is in the Off position. Do NOT turn the phone until the following has been completed.

Getting Started

Check the contents of the box, you should have the following.

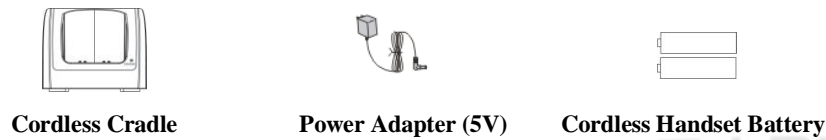

User Manual (CD)

 
Getting Started

Setting up the Base Unit

Remove the GTSIMF01 from the box, and proceed as follows:

WARNING!!!! IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION OF THE GTSIMF01, PLEASE READ AND COMPLY WITH THE FOLLOWING INFORMATION BEFORE USING YOUR PHONE.

Please note, failure to follow the following steps can result in damage to the phone and therefore void any warranty on the product.

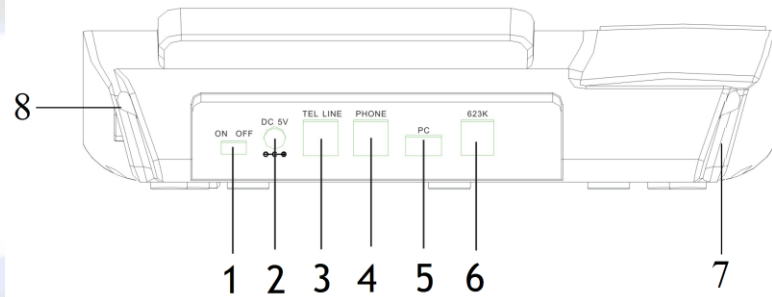

1. On/Off Switch
2. Power Port
3. PSTN Line In
4. Phone Extension
5. USB Port
6. Upgrade Port
7. Handset Connection
8. Antenna Connection

Before commencing make sure the phone is in the Off position, and the telephone line is unplugged.

Getting Started (Base Unit)

Handset Connection

 
- Connect the hand piece to the handset connection on the left hand side of the phone. (Fig 1(7))

Antenna Installation

- Screw on the antenna into the antenna socket on the right hand side of the phone See Fig 1(8). (**Important!! Failure to do so will result in irreparable damage to the circuitry, and will void any warranty**)


SIM Card And Backup Battery Installation

Make sure you turn off the phone and disconnect from telephone line before installing the SIM or Battery.

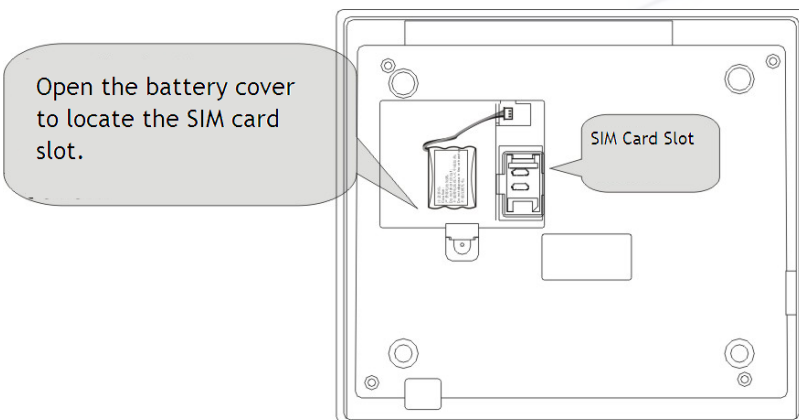

- Turn the phone over and open the battery cover to locate the SIM card slot.

 Getting Started (Base Unit)

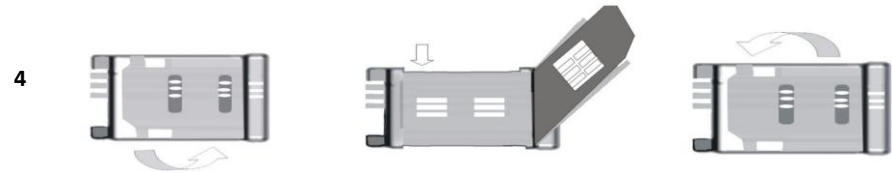

- Insert the SIM into the SIM card slot.
- Connect the backup battery by clipping the connector into the pins provided.
- Replace the battery cover when done

Warning: New batteries for the units are shipped partially charged. Before you start using the GTSIMF01, you will need to charge the batteries for up to 14 Hours.

External Power Adapter

- Insert the power adapter into the power port labeled **DC 5V**, and plug it into a power source.. See Fig 1(2).

 
Turning the phone On

- Turn the switch to the **ON** position, the display lights up, and the phone begins to search for the appropriate network.

Turning the phone Off

- Turn the switch to the OFF position, the display goes off, and the phone is now off.

Getting Started (Base Unit)

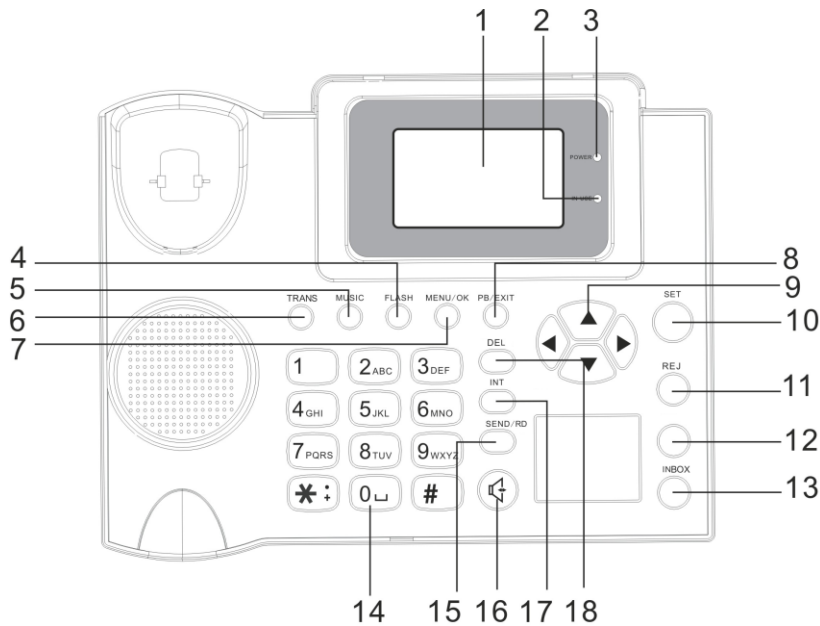


1. **LCD DISPLAY**
2. **IN USE INDICATOR**
3. **POWER LIGHT INDICATOR**
4. **FLASH**
Press to disconnect from a call.
5. **MUSIC**
In Standby Mode, press to access and set ring tones.
6. **TRANS**
Press to transfer incoming calls to cordless handsets

Getting Started (Base Unit)

7. **MENU/OK**
In Standby Mode, press to access the Menu or move to the next screen.
8. **PB/EXIT**
In Standby Mode, press to access the Phone Book. In Menu Mode press to go to the previous screen.
9. **NAVIGATION KEYS**
Used to navigate through the menus.
10. **SET**
In Standby Mode, press to access Phone Settings, in Menu Mode, press to save settings.
11. **REJ**
In Standby Mode, press to reject an incoming call.
12. **WRITE Msg**
In Standby Mode, press to compose a message.
13. **INBOX**
In Standby Mode, press to access messages
14. **0**
In Standby Mode, press to toggle case.
15. **SEND/RD**
In Standby Mode, press to access previously dialed calls. In Menu Mode press to dial a number.
16. **SPEAKER**
In Standby Mode, press to receive or make calls
17. **INT**
In Standby Mode press to page cordless handsets
18. **DEL**
In Menu Mode, press to delete a character at a time

 Getting Started (Cordless Handset)

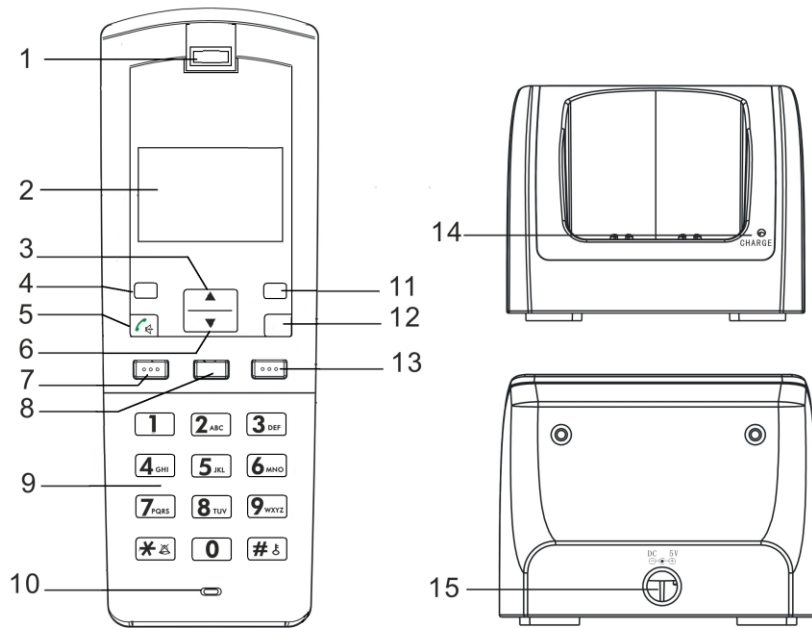

1. **SPEAKER**
2. **LCD DISPLAY**
3. **NAVIGATION KEYS (Up Arrow)**
Used to navigate through the menus
4. **MENU**
In Standby Mode, press to access the Menu or move to the next screen.
5. **DIAL/SPEAKER**
To initiate a dial or switch to speaker mode.
6. **NAVIGATION KEYS (Down Arrow)**
Used to navigate through the menus

Getting Started (Cordless Handset)

7. **REDIAL**
In Standby Mode, press to redial the last number.
8. **INT**
In Standby Mode, press to use the intercom. In Menu Mode press to transfer call to another handset.
9. **KEYPAD**
Used to dial numbers or send text messages.
10. **MICROPHONE**
11. **SEND**
In Menu Mode press to dial a number.
12. **DISCONNECT**
Press to hang up or disconnect a call.
13. **BACK**
Press to delete a character at a time,
14. **ON CHARGE INDICATOR**
15. **POWER PORT (7.5V)**

Getting Started (Cordless Handset)

Setting up the Cordless Handset

Backup Battery Installation

- Turn the cordless handset over and slide the battery cover to remove.
- Connect the backup battery by clipping the connector into the pins provided.
- Replace the battery cover when done.

External Power Adapter

- Insert the power adapter into the power port at the back of the cordless handset cradle, labeled **DC 9V** and plug it into a power source.
- Place the cordless handset into the cradle to charge.

Register your Cordless Handsets

A Base Unit can have up to 4 registered Cordless Handsets.

To register a cordless handset to a base unit, you need to pair the devices.

Base Unit

1. In Idle Mode, Press Menu/OK and then 3 to proceed to the **Phone Settings** screen.
2. Use the ▼▲ buttons to locate **Handset Function** and press Menu/OK to proceed.
3. Use the ▼▲ buttons to locate **Register** and press Menu/OK to proceed. The screen will display **Register...**, and the base unit is ready to pair.

Handset

1. In Idle Mode, press MENU to proceed.
2. Use the ▼▲ buttons to locate **SETUP** and press Menu to proceed.
3. Use the ▼▲ buttons to locate **REGISTER** and press Menu to proceed.
4. Use the ▼▲ buttons to locate **NEW REGISTER** and press Menu to proceed.
5. Use the ▲▼ keys to select from **BASE UNIT 1** or **BASE UNIT 2** and press MENU to proceed.

Getting Started (Cordless Handset)

6. Enter **1234** as the
7. **INPUT PIN** and press MENU to proceed.
8. The screen will flash **REGISTER**, and will attempt to pair with the Base Unit. If the Base Unit displays Success, and the Handset has a long prolonged beep, the Handset has paired successfully.
9. Follow the same procedure if you have multiple Handsets.

You are now ready to connect the telephone line and start using your new GTSIMF01 phone.

Using the Phone

Basic Operations for Base Unit

Making Calls

Making an External Call via GSM (Mobile Network)

Pick up the hand piece or press the, ◀ and dial the number. Press **SEND/RD**, or wait 3 seconds for the call to connect.

Making an External Call via PSTN (Land Line)

Pick up the hand piece, press * followed by the number. Press **SEND/RD**, or wait 3 seconds for the call to connect.

Transferring an External Call to a Cordless Handset

Press the TRANS key followed by the Cordless Handset Number you wish to transfer to, the display shows PAGE H<nb>, and the call is transferred.

Making an Internal Call

Press the INT Key followed by the cordless handset number i.e. (1,2,3 or 4) the display will show PAGE H<nb>. Pick up the hand piece, and wait for the cordless handset to be answered.

Ending a Call

Hang up the hand piece or Press the FLASH button to end the call.

Answering a Call

When you receive a call, the phone rings, and the display shows the incoming call number. Pick up the hand piece or press the ◀ button to receive the call.

Redial

Pick up the hand piece and press the **SEND/RD** button, the last number dialed will be redialed

Using the Phone

Receiving more than one call at a time (Call Waiting)

If you are using the PSTN (Landline) and you have an incoming call on the GSM(Mobile) Network, you will hear a beep at intervals to notify you of the incoming call, and the display on the Base Unit will show **TALK**. Press the Menu/OK button to pick up the call. The PSTN(Landline) call will go on hold, and the display on the Base Unit will now change to show **SWITCH**. Press Menu/Ok at anytime to switch between the two calls.

Handset Receiver Volume

During a call, you can adjust the volume of the handset receiver by pressing ◀(-) to reduce the volume or (+)▶ to increase it.

Speakerphone Calls

Making a call using the Speakerphone

To make a call using the Speakerphone, press the ◀ button, the speaker icon is displayed, and you hear your call over the loudspeaker.

Receiving a call using Speakerphone

To receive a call using the Speakerphone, press the ◀ button, the call is then transferred to the loudspeaker.

Switching to the Speakerphone during a call

During a call press the ◀ button, the speaker icon is displayed, and you hear your call over the loudspeaker. To switch the Speakerphone off, and return to the hand piece at anytime, just pick up the hand piece, or press the ◀ button again to end the call.

Basic Operations For the Cordless Handset

Making an External Call via GSM (Mobile Network)


Enter the number you wish to dial, and press ☎ to initiate the call.

Making an External Call via PSTN (Land Line)


Enter * followed by the number you wish to dial, and press ☎ to initiate the call.

Using the Phone


Transferring an external call from one handset to another handset

Press the INT key followed by the Cordless Handset Number you wish to transfer to, and wait for the call to be answered. The display shows INTERCOM H<nb>. Once the called handset is answered, you press  and the call is transferred.

Three Way Conference Call

Press the INT key followed by the Cordless Handset Number you wish to conference in, the display shows INTERCOM H<nb>. Once the called handset is answered, you press the INT key again to have a Three Way Conference. Press  at anytime to exit the Three Way Conference.

 

Receiving a Call

When you receive a call, the cordless handset will ring, and the display will light up, with the word "RINGING". Pick up the cordless handset from the cradle and press  to answer.

Ending a Call


To end a call press .

Handset Receiver Volume


During a call, you can adjust the volume of the cordless handset by pressing  to increase it or  to reduce it.

Speakerphone Calls

 Making a call using the Speakerphone

To make a call using the Speakerphone, press the  button, the speaker icon is displayed, and you hear your call over the loudspeaker.

Receiving a call using Speakerphone

To receive a call using the Speakerphone, press the  button, the call is then transferred to the loudspeaker.

Switching to the Speakerphone during a call

During a call press the  button to switch to the loudspeaker.



Using the Phone

Menu Operations (Base Unit)

Names

You can store up to 100 names and numbers in the Phone Book, names can be up to 16 characters long and numbers up to 30 digits. Press PB/EXIT to proceed to the Search option in the **Names** screen.

Search

1. Press Menu/OK to proceed.
1. To search for an entry in the Phone Book, you can input a name and press Menu/OK. If more than one entry appears, you can use the   buttons to traverse through the entries to find the one you want.
2. Press Menu/OK again and you will be presented with the following options.

- **Call**
- **Send Message**
- **Edit Name**
- **Edit Number**
- **Delete**

 
 
Call

1. Press OK to call the entry selected, the display shows **Calling....**, and the number is dialed.

Send Message

1. Press OK to send a message to the entry selected.
2. Enter a message of up to 512 characters and press Menu/OK.

Edit Name

1. Select the Edit Name option and press Menu/OK to proceed.
2. Use DEL to delete any incorrect characters, and then  or  to move through the characters then enter new ones using the keypad and press Menu/OK to save and exit.

Using the Phone

Edit Number

1. Select the Edit Number option, and press Menu/OK to proceed.
2. Use DEL to delete any incorrect numbers, and then ◀ or ▶ to move through the numbers then enter new ones using the keypad and press Menu/OK to save and exit.

Delete (Delete an Entry)

1. Press OK to delete the entry selected, the display shows **Sure to Delete?**
2. Press Menu/OK to proceed or PB/EXIT to abort.

Add Name

1. Select Add Name, and press Menu/OK to proceed.
2. Enter Name is displayed. Enter a name using the keypad and press Menu/OK to proceed
3. Enter Number is displayed. Enter the telephone number using the keypad and press Menu/OK to save

Messages

With text messaging, you can send and receive text messages up to 140 characters long. Press Menu/OK and select 1 to proceed to the **Messages** screen.

Write Message

1. Use the ▼▲ buttons to select **Write Message** and press Menu/OK to proceed.
2. Press Menu/OK to start writing a message. Write Message is displayed. (You can also press the WRITE Msg button to access the Write Message screen directly)
3. Enter a message of up to 140 characters using the keypad and press Menu/OK to proceed. You are then presented with the following options. 1. Send, 2. Send & Save
4. Use the ▲▼ buttons to select the appropriate option, and press Menu/OK to proceed.
5. Enter the number or search for the recipient in the phone book, and press Menu/OK to send.

Using the Phone

Saved Messages are stored in Outbox

If you Send & Save a message, it will be stored in Outbox.

Received Messages are stored in the Inbox

You can store up to 32 messages in your Inbox.

Receiving and reading text messages

When you receive a new text message, the envelope icon flashes on the display, and you will hear the new message alert tone.

Inbox

1. Use the ▼▲ buttons to select Inbox and press Menu/OK to proceed. (You can also press the INBOX button to access the messages directly)
2. Messages marked with a closed envelope icon are new messages, Press Menu/OK to view details of the message.

For each message you will see:

- The sender's number.
- The first line of the message.
- The date and time the message was sent.

3. Press Menu/OK to view the full message.
4. Press Menu/OK again and you will be presented with the following options.

- **Reply**
- **Edit**
- **Call**
- **Delete**

Reply

1. Press Menu/OK to compose a reply.
2. Enter a message of up to 140 characters using the keypad and press Menu/OK to proceed.
3. The display shows **Sending Message**, followed by **Success** if it was sent successfully or **Failed** if it fails to send.

Using the Phone

Edit

1. Press Menu/OK to edit an existing message.
2. Press Menu/OK again, and you will be presented with the following options. 1. **Send Only** 2. **Save and Send** 3. **Save**.
3. Use the ▲▼ buttons to select the appropriate option, and press Menu/OK to proceed.
4. Enter the number or search for the recipient in the phone book, and press Menu/OK to send.

Delete

1. Press Menu/OK to delete the entry selected, the display shows **Sure to Delete?**
2. Press Menu/OK to proceed or PB/EXIT to abort.

Read, edit, send or delete text messages in the Outbox

1. Use the ▲▼ buttons to select the Outbox option and press Menu/OK to view details of the message.

For each message you will see:

- The sender's number.
- The first line of the message.
- The date and time the message was sent.

Press Menu/OK to view the full message.

Call Records

The call history holds up to 32 Missed Calls, 32 Dialed Numbers and 32 Received Calls. Calls are all stored in the order they were received or dialed. Press Menu/OK and then 2 to proceed to the **Call Records** screen.

1. Use the ▼▲ buttons to select from (**Missed Calls, Received Calls, or Dialed Calls**) and press Menu/OK to proceed.

Using the Phone

2. Use the ▼▲ buttons to select the call from the list, and press Menu/OK. Details of the call are displayed.

For each message you will see:

- The sender's name and number.
- The date and time the message was sent.

3. Press Menu/OK again and you will be presented with the following options.

- **Delete**
- **Call**
- **Send Message**
- **Save to Phone Book**

Delete

1. Press MENU/OK to delete the entry selected, the display shows **Sure to Delete?**
2. Press MENU/OK to proceed or PB/EXIT to abort. On confirmation, the display will show **Success**.
3. Press PB/EXIT 3 times to return to standby mode.

Call

1. Press MENU/OK to call the entry selected, the display shows **Calling....**, and the number is dialed.

Send Message

1. Press MENU/OK to send an SMS to the entry selected, the display shows **Write Message**.
2. Enter a message of up to 140 characters using the keypad and press Menu/OK to proceed. The display shows **Sending Message** followed by **Send Successful**.
3. Press PB/EXIT 4 times to return to standby mode.

Using the Phone

Save to PhoneBook

1. Press MENU/OK to save the selected entry to the Phone Book. The display shows **Saved To Memory**, and the entry is saved to the phone book.
2. Press PB/EXIT 3 times to return to standby mode

You can use the **Delete All** option under the **Call Records** screen to remove all call records for (**Missed Calls, Received Calls, or Dialed Calls**)

Phone Settings

Allows you to Register your Cordless Handsets, and set Ring Tones, SMS Tones, LCD Contrast, and Language. Press Menu/OK and then 3 to proceed to the **Phone Settings** screen.

Handset Function

Refer to section "Getting Started"

SMS Tone

1. Use the ▼▲ buttons to select SMS Tone and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select from 11 Tones, highlight the one you want, and press Menu/OK to save your settings. The display will show **Success**
3. Press PB/EXIT twice to return to standby mode.

Ring Tone

1. Use the ▼▲ buttons to select Ring Tone and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select from 11 Tones, highlight the one you want, and press Menu/OK to save your settings. The display will show **Success**
3. Press PB/EXIT twice to return to standby mode.

LCD Contrast

1. Use the ▼▲ buttons to select LCD Contrast and press Menu/OK to proceed.
2. Use the ▼▲ buttons to adjust the contrast (1 – 63), and press Menu/OK to save your settings. The display will show **Success**
3. Press PB/EXIT twice to return to standby mode.

Using the Phone

Language

1. Use the ▼▲ buttons to select Language and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select from Chinese or English, highlight the one you want, and press Menu/OK to save your settings. The display will show **Success**
3. Press PB/EXIT twice to return to standby mode.

Call Service

Allows you to Divert an incoming GSM (Mobile) call to either a Landline (PSTN) or another GSM(Mobile) number. Calls can be diverted under the following conditions, When Busy, When there's No Answer, or when it's Not Reachable. Press Menu/OK and then 4 to proceed to the **Call Service** screen.

1. Press Menu/OK to proceed.
2. Use the ▼▲ buttons to select from (**Divert AllCall, When Busy, No Answer, or Not Reachable**) and press Menu/OK to proceed. You will be presented with the following options.

- **Open**
- **Close**
- **Query Status**

Open (Diverts incoming calls to an appointed number)

1. Use the ▼▲ buttons to select Open, Enter the phone number you wish to divert to using the keypad and press Menu/OK to proceed.
2. The display shows **Connect Net**, followed by **Success** if it was saved successfully or **Failed** if it failed to save.
3. Press PB/EXIT 4 times to return to standby mode.

Close (Cancels the diversion)

1. Use the ▼▲ buttons to select Close, and press Menu/OK to proceed.
2. The display shows **Connect Net**, followed by **Success** if it was saved successfully or **Failed** if it failed to save.
3. Press PB/EXIT 4 times to return to standby mode.

Using the Phone

Query Status (Shows the status of the current diversion)

1. Use the ▼▲ buttons to select Query Status and press Menu/OK to proceed.
2. The display shows "Connect Net", followed by the diverted number.
3. Press PB/EXIT 4 times to return to standby mode.

You can use the **Cancel All** option under the **Call Service** screen to remove all diversions for (**Divert AllCall, When Busy, No Answer, or Not Reachable**).

Time Settings

Allows you to set the Date and Time. Press Menu/OK and then 5 to proceed to the **Time Settings** screen.

Set Date

1. Use the ▼▲ buttons to select **Set Date** and press Menu/OK to proceed.
2. Use the keypad to enter the Year (YY) Month (MM) and Day (DD) and press Menu/OK to proceed. The display will show **Success**, and the date is now set.
3. Press PB/EXIT twice to return to standby mode.

Set Time

1. Use the ▼▲ buttons to select **Set Time** and press Menu/OK to proceed.
2. Use the keypad to enter the Hour (HH) Minutes (MM) and Seconds (SS) and press Menu/OK to proceed. The display will show **Success**, and the time is now set.
3. Press PB/EXIT twice to return to standby mode.

Alarm Clock

Allows you to set, up to 3 Alarms. Press Menu/OK and then 6 to proceed to the **Alarm Clock** screen.

Setting an Alarm

1. Use the ▼▲ buttons to select from **Alarm 1,2,or 3** and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select **On** and press Menu/OK to proceed
3. Use the keypad to enter the Hour (HH) Minutes (MM) , use the ▼▲ buttons to set the Tone and Volume, and press Menu/OK to proceed. The display will show **Success**, and the alarm is now set.

Using the Phone

4. Press PB/EXIT 3 times to return to standby mode.

Follow the same procedure if you want to set all 3 alarms.

Turning the Alarm Off

1. Use the ▼▲ buttons to select from **Alarm 1, 2, or 3** and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select **Off** and press Menu/OK to proceed. The display will show **Success**, and the alarm is now off.
3. Press PB/EXIT 3 times to return to standby mode.

Follow the same procedure if you want to turn all 3 alarms off.

Using the Phone


Menu Operations (Cordless Handset)

1. Press Menu to proceed.
2. Use the ▲▼ buttons to traverse through the different menu options. You have the following options.

- **PHONEBOOK**
- **SETUP**
- **PROFILE**
- **FUNCTION**
- **CALL LOG**

PHONEBOOK

You can store up to 100 names and numbers in the Phone Book, names can be up to 16 characters long and numbers up to 30 digits.

1. Press Menu/OK to proceed, if you have programmed names and numbers, they will appear in alphabetic order, and you can use the ▲▼ buttons to traverse through the list for the one you want.
2. Press  to initiate the call.

New Entry

1. Press Menu/OK to proceed.
2. **INPUT NAME** is displayed. Enter a name using the keypad and press Menu/OK to proceed
3. **INPUT NUMBER** is displayed. Enter the telephone number using the keypad and press Menu/OK to save
4. Press Menu/OK to add another entry, or press **BACK** twice to return to standby mode.

Edit Record

1. Use the ▲▼ buttons to traverse through the list for the name you want to edit and press Menu/OK to proceed.
2. Use the ▲▼ buttons to select **EDIT RECORD** and press MENU OK to proceed.

Using the Phone

3. Delete any incorrect characters using the BACK button for both the name and number, and then enter new ones using the keypad and press Menu/OK to save and exit.

Delete Record

1. Use the ▲▼ buttons to traverse through the list for the name you want to delete and press MENU OK to proceed.
2. Use the ▲▼ buttons to select **DELETE RECORD**, and press MENU OK to proceed.


Delete All

1. Use the ▲▼ buttons to select **DELETE ALL**, and press MENU OK to proceed. The display shows **CONFIRM**, press MENU OK to confirm the deletion of the entire Phonebook.

Select Group

1. Use the ▲▼ buttons to traverse through the list for the name you want to add to a group and press Menu/OK to proceed.
2. Use the ▲▼ buttons to select , **SELECT GROUP** and press MENU OK to proceed.
3. Use the ▼▲ buttons to select from the following **DEFAULT GROUP, VIP GROUP, FAMILY GROUP, FRIEND GROUP** and **COLLEAGUE GROUP** and press Menu/OK to proceed.

Speed Dial

1. Use the ▲▼ buttons to traverse through the phone book list for the name you want to add as a speed dial and press Menu/OK to proceed.
2. Use the ▲▼ buttons to select , **SPEED DIAL** and press MENU OK to proceed.
3. You have a Hot Key choice of 0-9. Select the number you want to assign as a speed dial number for the name you selected and press MENU OK.
4. To Activate the speed dial, press and hold the assigned Hot Key till the number is displayed. Press  to initiate the call.

Memory Status

1. Use the ▲▼ buttons to traverse through the phone book list for the name you want and press Menu/OK to proceed.
2. Use the ▲▼ buttons to select , **MEMORY STATUS** and press MENU OK to proceed. The display shows you the index in the phone book of the name you selected. (i.e. 002/100 – the second entry in a list of 100).

Using the Phone

SETUP

Allows you to Register your Cordless Handsets, and set **BACKLIGHT TIME, AUTO TALK, UNIT NAME, LANGUAGE, CONTRAST, CHANGE PIN CODE, TIME FORMAT, SET TIME,** and **SET DEFAULT.** Press Menu/OK to proceed.

BACKLIGHT TIME

1. Use the ▲▼ buttons to select, **BACKLIGHT TIME** and press MENU OK to proceed.
2. You have a choice of 5 – 20 seconds. Use the ▲▼ buttons to adjust the time, and press MENU OK.

AUTO TALK

Allows you to set the cordless handset to auto talk, so that you can start talking as soon as you pick up the handset from the cradle.

1. Use the ▲▼ buttons to select, **AUTO TALK** and press MENU OK to proceed.
2. You have a choice of 5 – 20 seconds. Use the ▲▼ buttons to adjust the time, and press MENU OK.

UNIT NAME

1. Use the ▲▼ buttons to select, **UNIT NAME** and press MENU OK to proceed.
2. Enter a name, and press MENU OK. You will hear a prolonged beep, and the name is now set.

LANGUAGE

1. Use the ▲▼ buttons to select, **LANGUAGE** and press MENU OK to proceed.
2. You have a choice of 3 (**English, Simple Chinese, Complex Chinese**). Use the ▲▼ buttons to select the appropriate one, and press MENU OK.

CONTRAST

1. Use the ▲▼ buttons to select, **CONTRAST** and press MENU OK to proceed.
2. You have a choice of 1-8. Use the ▲▼ buttons to adjust the contrast level, and press MENU OK.

REGISTER

Please refer to pages 9 and 10.

Using the Phone

CHANGE PIN CODE

1. Use the ▲▼ buttons to select, **CHANGE PIN CODE** and press MENU OK to proceed.
2. Enter a 4 digit number and press MENU OK. The new code has now been set.

TIME FORMAT

1. Use the ▲▼ buttons to select, **TIME FORMAT** and press MENU OK to proceed.
2. Use the ▲▼ buttons to select from 12HOUR or 24 HOUR , and press MENU OK. You will hear a prolonged beep, and the selected time format is now set.

SET TIME

1. Use the ▼▲ buttons to select **SET TIME** and press Menu/OK to proceed.
2. Use the ▼▲ buttons to adjust the Year (YY) and press Menu/OK to proceed, do the same for each of the following Month (MM), Day (DD), Hour (HH) and Minutes (MM).

SET DEFAULT

1. Use the ▼▲ buttons to select **SET DEFAULT** and press Menu/OK to proceed.
2. The display shows “**CONFIRM**”, press Menu/OK to confirm. (**Please note, applying this setting might set the Language to Chinese**).

PROFILE

Allows you to set a Profile for your Cordless Handsets, which includes the following **RING TONE, RINGER VOLUME, PAGE TONE, AND KEY TONE.** Press Menu/OK to proceed.

HS RINGER MUSIC

1. Use the ▼▲ buttons to select **HS RINGER MUSIC** and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select from the following **DEFAULT GROUP, VIP GROUP, FAMILY GROUP, FRIEND GROUP** and **COLLEAGUE GROUP** and press Menu/OK to proceed.
3. Use the ▼▲ buttons to select from the 20 available Ring Tones, highlight the one you want, and press Menu/OK. You will hear a prolonged beep, and the ring tone is now set.

Using the Phone

HS RINGER VOL

1. Use the ▼▲ buttons to select **HS RINGER VOL** and press Menu/OK to proceed.
2. You have a choice of 1-6. Use the ▲▼ buttons to adjust the volume, and press MENU OK. You will hear a prolonged beep, and the volume is now set.

PAGE TONE

1. Use the ▼▲ buttons to select **PAGE TONE** and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select from the 4 available Page Tones, and press Menu/OK. You will hear a prolonged beep, and the page tone is now set.

KEY TONE

1. Use the ▼▲ buttons to select **KEY TONE** and press Menu/OK to proceed.
2. Use the ▼▲ buttons to select a Tone or Turn it OFF, and press Menu/OK to save the setting.

FUNCTION

Allows you to adapt the functionality of cordless handset to do the following **NONDISTURB**, **ALARM1**, **ALARM2**, **WALKIE TALKIE**, **BABY CALL**, and **ROOM MONITOR**. Press Menu/OK to proceed.

NONDISTURB

1. Use the ▲▼ buttons to select, **NONDISTURB** and press MENU OK to proceed.
2. You have a choice of either OFF or 1 – 16 hours. Use the ▲▼ buttons to make your selection, and press MENU OK. You will hear a prolonged beep, and the cordless handset is now set.

ALARM 1 / ALARM 2

Setting an Alarm/Reminder.

1. Use the ▲▼ buttons to select, **ALARM 1 or ALARM 2** and press MENU OK to proceed.
2. Use the ▲▼ buttons to highlight **SELECT ON**, and press MENU OK to proceed. Set the time using the ▲▼ buttons and press MENU OK. You will hear a prolonged beep, and the Alarm is now set.

Using the Phone


BABY CALL

In case of an emergency, you can set the handset to dial a designated number. Once the handset is activated for **BABY CALL**, pressing any key on the keypad will dial the designated emergency number.

1. Use the ▲▼ buttons to select, **BABY CALL** and press MENU OK to proceed.
2. The display shows SET NUMBER, press MENU OK to proceed.
3. Enter your designated emergency number, and press MENU OK, the designated emergency is now set.
4. Use the ▲▼ buttons to highlight, **SELECT ON/OFF** and press MENU OK.
5. Use the ▲▼ buttons to highlight **ON** and press MENU OK. The **BABY CALL** function is now activated, and the display will flash **BABY CALL**.
6. To deactivate the **BABY CALL** function, Use the ▲▼ buttons to highlight, **SELECT ON/OFF** and press MENU OK.
7. Use the ▲▼ buttons to highlight **OFF** and press MENU OK.

ROOM MONITOR

You can use this function as a baby monitor. You will need 2 cordless handsets to facilitate this function.

1. Use the ▲▼ buttons to select, **ROOM MONITOR** on Handset 1 (H1) and press MENU OK to proceed.
2. The display shows **FUNCTION ON**, press MENU OK to activate the **ROOM MONITOR** function.
3. Press the **INT** key on Handset 2 (H2) followed by the number of Handset 1 (H1). You can now monitor the room where Handset 1 (H1) resides.
4. To turn off room monitoring, press the  key on Handset 1(H1)

Using the Phone

CALL LOG

The call log holds up to 32 Missed Calls, 32 Dialed Numbers and 32 Received Calls. Calls are all stored in the order they were received or dialed. Press Menu OK to proceed.

1. Use the ▼▲ buttons to select from (**MISSED CALL, RECEIVED CALL, or DIALED CALL**) and press Menu OK to proceed.
2. Use the ▼▲ buttons to select the call from the list, and press Menu OK. Details of the call are displayed.
3. Press Menu/OK and you will be presented with the following options.

- **STORE RECORD**
- **DELETE RECORD**
- **DELETE ALL**

STORE RECORD

1. Press Menu OK to proceed.
2. **INPUT NAME** is displayed. Enter a name using the keypad and press Menu OK to proceed
3. **INPUT NUMBER** is displayed. Change the telephone number using the keypad or keep the displayed number and press Menu OK to save
4. The display shows **OVERWRITE**, press MENU OK, you will hear a prolonged beep, and the number will be saved to the phonebook.

DELETE RECORD

1. Press Menu OK to proceed. You will hear a prolonged beep, and the selected number in the call list will be deleted.

DELETE ALL

1. Press Menu OK to proceed.
2. The display shows **CONFIRM**, press Menu OK to delete the entire selected call list.