



capetune.com



capetune.com

Huawei ETS3 F662

Mobile Phone

CAPETUNE

USER GUIDE

Copyright © Huawei Technologies Co., Ltd. 2013. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this manual may include copyrighted software of Huawei and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders.

Trademarks and Permissions



HUAWEI, and



are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Thus, the descriptions herein may not exactly match the product or its accessories which you purchase.

Huawei reserves the right to change or modify any information or specifications contained in this manual without prior notice and without any liability.

DISCLAIMER

ALL CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT.

THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS MANUAL SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and be responsible to obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Privacy Policy

 
To better understand how we protect your personal information, please see the privacy policy at <http://consumer.huawei.com/en/privacy-policy/index.htm>.

Getting started

Getting to know your phone

Note:



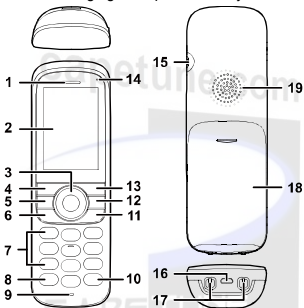

The following figure is provided for your reference only.



1	Earpiece	2	Screen
3	Navigation keys	4	Left function key
5	SOS key	6	Call key
7	Number keys	8	* key
9	Microphone	10	# key
11	End key	12	Clear key
13	Right function key	14	Status indicator
15	Headset jack	16	USB port

17	Charger jack	18	Battery cover
19	Speaker		

Keys

Press...	To...
Right function key 	<ul style="list-style-type: none"> • Select the option displayed in the lower right corner of the screen. • Enable or disable hands-free mode during a call. • Enable or disable mute mode when making a call with a headset.
Clear key 	Delete the character to the left of the cursor.
End key 	<ul style="list-style-type: none"> • End or reject a call. • Power on or off the phone (by pressing and holding this key). • Return to the standby screen.
Number keys	<ul style="list-style-type: none"> • Enter numbers or characters (by pressing keys 0–9). • Speed-dial phone numbers in standby mode (by pressing and holding keys 2–9). • Call voicemail in standby mode (by pressing and holding the 1 key).
Call key 	<ul style="list-style-type: none"> • Dial a number or answer a call. • View the call log in standby mode.

Press...

To...

SOS key



- Press the SOS key to display the preset emergency number. You can enter another emergency instead. Press the SOS key again or press the Call key to make an emergency call.
- Press and hold the SOS key to directly call the preset emergency number.
- To change the preset emergency number, select **Menu > Settings > Call > SOS**. You can only set an emergency number supported by the local network. For details, please contact your service provider.

Left function key



Select the option displayed in the lower left corner of the screen.

 
Navigation keys



- In standby mode, select **Menu > Settings > Display > Standby screen > Concise mode** to set the navigation keys as shortcuts for different functions.
- Adjust the in-call volume.

Installing the USIM card and battery


When installing the USIM card, make sure that the gold contact surface on the USIM card is facing downward and that the beveled edge of the USIM card is properly aligned with that of the USIM card slot.

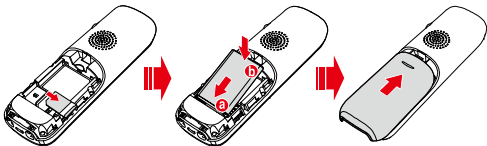


Charging the battery

You can use either of the following methods to charge the battery:

  - Method 1:

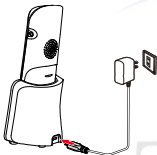



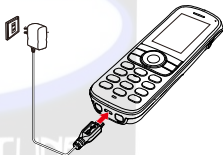











- Method 2:



Note:

- If you do not need to use the battery for a long period of time, remove it from the phone.
- If the battery has not been used for a long period of time, or if the battery power has been completely depleted, the phone may not display anything on the screen when you connect it to a charger. Wait for a while before trying to power on or use the phone.

Screen icons

Icon	Indicates...	Icon	Indicates...
	Signal strength		Battery level
	Ongoing call or setting up a call		Missed calls
	Call forwarding enabled		Roaming
	Unread text messages		Unread multimedia messages
	Unread voice messages		Alarm activated
	2G network		3G network
	Headset inserted		Normal profile

Powering on the phone

To power on the phone, press and hold the end key until the screen lights up.



Note:

Press and hold the end key to power off the phone.


Voice services

Making a call

Making a call directly

1. In standby mode, press the number keys to enter a phone number.
2. Press  to dial the number.
3. Press  to end the call or cancel dialing.



Making a call from contacts

1. In standby mode, select **Menu > Contacts**.
2. Find the desired contact, and then press  to dial the number.




Note:

In **Contacts**, you can also create, search for, or delete a contact.

Making a call from the call log


1. In standby mode, select **Menu > Call log** or press  to display the call log, including your missed calls, received calls, and dialed numbers.
2. Find the desired number, and then press  to dial the number.

Answering or rejecting a call

When there is an incoming call, you can press  to answer the call, press  to mute the ringtone, or press  to reject the call.

Messaging

Creating a message

1. Select **Menu > Messages > Create message**.
2. Press the **OK** key to select recipients or press the number keys to enter the numbers of recipients.
3. When writing a message, you can:
 - Press the **OK** key to attach pictures or audio clips to the message.
 - Select **Options** for more options.
4. Press  to send the message.

Reading a message

1. Select **Menu > Messages > Inbox**.
2. Press the up or down navigation key to view the message list.
3. Press the **OK** key to read the selected message.
4. Select **Options** for more options.

Contacts

Creating a contact

1. Select **Menu > Contacts > Create contact**.
2. Enter the contact information. If the contact is saved on the USIM card, only the contact name and mobile number can be saved.
3. Select **Save** to save the contact.

Note:


- On the **Contacts** screen, select **Options** > **Manage contacts** > **Default storage location** to change the default save location for contacts.
- On the **Contacts** screen, select **Options** > **Manage contacts** > **Display contacts** to display contacts on your phone, USIM card, or both. If you select **Phone** or **Smart card**, the default save location for new contacts will be set accordingly.

Searching for a contact

1. Select **Menu** > **Contacts**.
2. Enter the initials of a contact. Your phone will automatically display matching contacts as you type. For example, if you want to search for Ken, enter "K".

Text input methods

Note:

- Press the **#** key to switch between text input modes. Press and hold the **#** key to switch between the predictive and traditional input modes.
- Press the ***** key to display the symbol list, and then select and enter different symbols.
- In the editing state, press  to delete the character to the left of the cursor.
- In "Abc", "ABC", or "abc" mode, press the **0** key to enter a space.
- In "Abc", "ABC", or "abc" mode, press the **1** key

consecutively to enter a commonly used symbol.

Predictive English input (EN/En/en)

In predictive input mode:

1. Press each number key only once according to the spelling sequence of the desired word.
Your phone displays candidate words as you type.
2. Press the up or down navigation key to select a word.
3. Press the left or right navigation key to confirm the selection and enter the word.
You can also press the **0** key to confirm the selection and enter the word followed by a space.

Traditional English input (ABC/Abc/abc)

In traditional input mode, press the number key labeled with the desired letter or digit consecutively until the desired letter or digit is displayed. If the letter you want to enter is on the same key as the previous letter, enter the letter after the cursor appears again.


Number input (123)

The 123 mode enables you to enter numbers in a message (a telephone number, for example). Press the keys corresponding to the required digits.

Network mode

To switch between network modes:

1. Select **Menu > Settings > Network > Mode**.
2. Press the up or down navigation key to set a network mode.

3. Press  to save the settings.


Calendar

To view the calendar:

1. Select **Menu > Calendar**, and then scroll to the desired date.
2. Perform either of the following operations:
 - Press the **OK** key to view the corresponding schedule of the date.
 - Select **Options** to add a reminder, set the display mode, jump to a specified date, or manage your schedule.

Alarms

To enable an alarm:

1. Select **Menu > Tools > Alarm**.
2. Select an alarm from the alarm list, press the left function key to enable or disable the alarm, and press the **OK** key to set the alarm.
3. Press  to save the settings.

Browser

Select **Menu > Browser** to perform operations as required. The browser on your phone allows you to access various Internet services conveniently.

Security settings

Phone lock

The phone lock helps protect your phone against unauthorized use. By default, this feature is disabled. If you enable phone lock, you will be prompted to enter a phone lock code each time you power on your phone.

The default phone lock code is **000000**, and can be modified to a number containing 6 to 8 digits.

PIN and PUK

The PIN can protect your USIM card against unauthorized use, while the PUK is used to unlock a blocked USIM card. If you enter incorrect PINs consecutively for specified times, the USIM card is blocked. In this case, you will need to enter the PUK to unblock it. The PIN and the PUK are provided with your USIM card. For details, contact your service provider.

Keypad lock

In standby mode, press and hold the * key to lock the keypad. If the keypad is locked, you can only dial emergency numbers and answer incoming calls.

In standby mode, press the left function key and then the right function key to unlock the keypad.

Safety information

This section contains important information about the operation of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Do not use your device if using the device is prohibited. Do not use the device if doing so causes danger or interference with other electronic devices.

Interference with medical equipment

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device where prohibited.
- Some wireless devices may affect the performance of hearing aids or pacemakers. Consult your service provider for more information.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If using a pacemaker, hold the device on the side opposite the pacemaker and do not carry the device in your front pocket.

Protecting your hearing when using a headset



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Using a headset at high volumes may damage your hearing. To reduce this risk, lower the headset volume to a safe and comfortable level.
- Exposure to high volumes while driving may cause distraction and increase your risk of an accident.

Areas with flammables and explosives

- Do not use the device where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your device in these environments increases the risk of explosion or fire. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in containers with flammable liquids, gases, or explosives.

Traffic Security

- Observe local laws and regulations while using the device. To reduce the risk of accidents, do not use your wireless device while driving.
- Concentrate on driving. Your first responsibility is to drive safely.
- Do not hold the device while driving. Use hands-free accessories.
- When you must make or answer a call, pull off the road safely and park the vehicle first.
- RF signals may affect the electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- Do not place the device over the air bag or in the air bag deployment area in a motor vehicle. Doing so may hurt you because of the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft or immediately before boarding. Using wireless devices in an aircraft may disrupt wireless networks, present a hazard to aircraft operation, or be illegal.

Operating Environment

- Avoid dusty, damp, or dirty environments. Avoid magnetic fields. Using the device in these environments may result in circuit malfunctions.
- Do not use your device during thunderstorms to protect your device against any danger caused by lightning.
- Ideal operating temperatures are 0 °C to +45 °C. Ideal storage temperatures are -20 °C to +70 °C. Extreme heat or cold may damage your device or accessories.
- Do not expose your device to direct sunlight (such as on a car dashboard) for prolonged periods.
- To protect your device or accessories from fire or electrical shock hazards, avoid rain and moisture.

- Keep the device away from sources of heat and fire, such as a heater, microwave oven, stove, water heater, radiator, or candle.
- Do not place sharp metal objects, such as pins, near the earpiece or speaker. The earpiece may attract these objects and result in injury.
- Stop using your device or applications for a while if the device is overheated. If skin is exposed to an overheated device for an extended period, low temperature burn symptoms, such as red spots and darker pigmentation, may occur.
- Do not touch the device's antenna. Otherwise, communication quality may be reduced.
- Do not allow children or pets to bite or suck the device or accessories. Doing so may result in damage or explosion.
- Observe local laws and regulations, and respect the privacy and legal rights of others.

Child's safety

- Comply with all precautions with regard to child's safety. Letting children play with the device or its accessories may be dangerous. The device includes detachable parts that may present a choking hazard. Keep away from children.
- The device and its accessories are not intended for use by children. Children should only use the device with adult supervision.

Accessories

- Using an unapproved or incompatible power adapter, charger or battery may cause fire, explosion or other hazards.
- Choose only accessories approved for use with this model by the device manufacturer. The use of any other types of accessories may void the warranty, may violate local regulations and laws, and may be dangerous. Please

contact your retailer for information about the availability of approved accessories in your area.

Charger safety

- For pluggable devices, the socket-outlet shall be installed near the devices and shall be easily accessible.
- Unplug the charger from electrical outlets and the device when not in use.
- Do not drop or cause an impact to the charger.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using it at once. Continued use may lead to electric shocks, short circuits, or fire.
- Do not touch the power cord with wet hands or pull the power cord to disconnect the charger.
- Do not touch the device or the charger with wet hands. Doing so may lead to short circuits, malfunctions, or electric shocks.
- If your charger has been exposed to water, other liquids, or excessive moisture, take it to an authorized service center for inspection.
- Ensure that the charger meets the requirements of Clause 2.5 in IEC60950-1/EN60950-1 and has been tested and approved according to national or local standards.
- Connect the device only to products with the USB-IF logo or with USB-IF compliance program completion.

Battery safety

- Do not connect battery poles with conductors, such as keys, jewelry, or other metal materials. Doing so may short-circuit the battery and cause injuries or burns.
- Keep the battery away from excessive heat and direct sunlight. Do not place it on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode if overheated.

- Do not attempt to modify or remanufacture the battery, insert foreign objects into it, or immerse or expose it to water or other liquids. Doing so may lead to fire, explosion, or other hazards.
- If the battery leaks, ensure that the electrolyte does not make direct contact with your skins or eyes. If the electrolyte touches your skins or splashes into your eyes, immediately flush with clean water and consult a doctor.
- In case of battery deformation, color change, or overheating while charging or storing, immediately stop using the device and remove the battery. Continued use may lead to battery leakage, fire, or explosion.
- Do not put batteries in fire as they may explode. Damaged batteries may also explode.
- Dispose of used batteries in accordance with local regulations. Improper battery use may lead to fire, explosion, or other hazards.
- Do not allow children or pets to bite or suck the battery. Doing so may result in damage or explosion.
- Do not smash or pierce the battery, or expose it to high external pressure. Doing so may lead to a short circuit or overheating.
- Do not drop the device or battery. If the device or battery is dropped, especially on a hard surface, and may be damaged.
- If the device standby time shortens significantly, replace the battery.

Cleaning and maintenance

- Keep the device and accessories dry. Do not attempt to dry it with an external heat source, such as a microwave oven or hair dryer.
- Do not expose your device or accessories to extreme heat or cold. These environments may interfere with proper function and may lead to fire or explosion.

- Avoid collision, which may lead to device malfunctions, overheating, fire, or explosion.
- Before you clean or maintain the device, stop using it, stop all applications, and disconnect all cables connected to it.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device or accessories. These substances may cause damage to parts or present a fire hazard. Use a clean, soft, and dry cloth to clean the device and accessories.
- Do not place magnetic stripe cards, such as credit cards and phone cards, near the device for extended periods of time. Otherwise the magnetic stripe cards may be damaged.
- Do not dismantle or remanufacture the device and its accessories. This voids the warranty and releases the manufacturer from liability for damage. In case of damage, contact an authorized service center for assistance or repair.
- If the device screen is broken in a collision, immediately stop using the device. Do not touch or attempt to remove the broken parts. Promptly contact an authorized service center.

Emergency calls

The availability of emergency calls is subject to your cellular network quality, service provider policy, and local laws and regulations. Never rely solely on your device for critical communications like medical emergencies.

Disposal and recycling information

This symbol (with or without a solid bar) on the device, batteries (if included), and/or the packaging, indicates that the device and its electrical accessories (for example, a headset, adapter, or cable) and batteries should not be disposed of as household garbage. These items should not be disposed of as unsorted

municipal waste and should be taken to a certified collection point for recycling or proper disposal.



For more detailed information about device or battery recycling, contact your local city office, household waste disposal service, or retail store. Disposal of the device and batteries (if included) is subject to WEEE Directive Recast (Directive 2012/19/EU) and Battery Directive (Directive 2006/66/EC). The purpose of separating WEEE and batteries from other waste is to minimize the potential environmental impacts and human health risk of any hazardous substances that may be present.

Reduction of hazardous substances

This device is compliant with the REACH Regulation [Regulation (EC) No 1907/2006] and RoHS Directive Recast (Directive 2011/65/EU). Batteries (if included) are compliant with the Battery Directive (Directive 2006/66/EC). For up-to-date information about REACH and RoHS compliance, please visit the web site www.huaweidevice.com/certification.

EU regulatory conformance

Body worn operation

The device complies with RF specifications when used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

Certification information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), an

independent scientific organization, and include safety measures designed to ensure the safety of all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level during operation can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue, and the highest SAR value for this device complies with this limit.

The highest SAR value reported for this device type when tested at the ear is 0.499 W/kg, and when properly worn on the body is 0.339 W/kg.

Statement

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the web site www.huaweidevice.com/certification.

The following marking is included in the product:

CE0168

This device may be operated in all member states of the EU. Observe national and local regulations where the device is used.

This device may be restricted for use, depending on the local network.

Please visit www.huaweidevice.com/worldwide/support/hotline for recently updated hotline and email address in your country or region.

